



WASHABLE / REUSABLE HEAVY DUTY AIR FILTER
THIS AIR FILTER HAS DRYFLOW™ MEDIA AND DOES NOT REQUIRE OIL
PART NUMBER: 38-2029S / 38-2032S

Cross references should be used for comparison of filters with similar dimensions. The user assumes all responsibility for verifying that filters are compatible with their application before using these products. Damage may result if the user fails to ensure that the filter is compatible and seals properly before installing the product or operating the engine.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

Everyone's mechanical ability is different; if you are unsure how to correctly change your air filter, please seek a professional mechanic's help.

REMOVAL AND INSTALLATION:

1. Unlatch and remove air filter from air filter housing.
2. Inspect the air filter housing and ensure that both the air filter housing and engine air inlet are clean. Wipe away any dirt or contaminants from these surfaces as well as the air filter housing.
3. Inspect the dirty air filter for any signs of leakage or damage.
4. Install the K&N® air filter, making sure the air filter seats completely. (Fig. 1)
5. Use the three air filter housing latches to secure filter. (Fig. 2 & Fig. 3)
6. Reset the vehicle air filter restriction gauge.
7. Service air filter at 15"H₂O or once a year.

When servicing the air filter follow the K&N® Heavy Duty Cleaning Instructions or access www.knfilters.com® to view online. Use K&N® Heavy Duty Air Filter Cleaner only.

CAUTION: DO NOT USE THE STANDARD K&N® AIR FILTER CLEANER OR SERVICE INSTRUCTIONS FOR THIS AIR FILTER.



Fig. 1



Fig. 2



Fig. 3

*** FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal ***

• 1455 CITRUS St., P.O. BOX 1329, RIVERSIDE, CA., U.S.A. 92502 • TECH SERVICE 800-858-3333 • FAX 951-826-4001
• e-mail: tech@knfilters.com® • WWW: <http://www.knfilters.com>®