



WASHABLE / REUSABLE HEAVY DUTY AIR FILTER

THIS AIR FILTER HAS DRYFLOW™ MEDIA AND DOES NOT REQUIRE OIL

PART NUMBER: 38-2033S

Cross references should be used for comparison of filters with similar dimensions. The user assumes all responsibility for verifying that filters are compatible with their application before using these products. Damage may result if the user fails to ensure that the filter is compatible and seals properly before installing the product or operating the engine.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

Everyone's mechanical ability is different; if you are unsure how to correctly change your air filter please seek a professional mechanic's help.

REMOVAL AND INSTALLATION:

1. Remove air filter housing cover.
2. Remove air filter from air filter housing. Wing nut will be reused with supplied K&N® washer.
3. Inspect the air filter housing and ensure that both the air filter housing and engine air inlet are clean. Wipe away any dirt or contaminants from these surfaces as well as the air filter housing.
4. Inspect the dirty air filter for any signs of leakage or damage.
5. Install the K&N® air filter, ensuring the air filter seats completely. Use existing wing nut with supplied K&N® washer.
6. Reinstall the air filter housing cover, ensuring the housing cover is attached securely.
7. Reset vehicle air filter restriction gauge.
8. Service air filter at 15"H₂O or once a year.

When servicing the air filter follow the K&N® Heavy Duty Cleaning Instructions or access www.knfilters.com® to view online. Use K&N® Heavy Duty Air Filter Cleaner only. CAUTION: DO NOT USE THE STANDARD K&N® AIR FILTER CLEANER OR SERVICE INSTRUCTIONS FOR THIS AIR FILTER.