



# INSTALLATION INSTRUCTIONS

## PART NUMBER: HA-2511

**This filter fits:** SEE CATALOG FOR CURRENT APPLICATIONS

\* **FREE K&N® decal** To register your warranty, please see us online at [knfilters.com/register](http://knfilters.com/register). **FREE K&N® decal \***

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® air filter seals properly.

### INSTALLATION:

1. Remove the stock air filter.
2. Place plastic frame on the K&N® air filter. Ensure the filter side labeled "FRONT" and the frame's clips are on the same side. When the frame is completely seated onto the air filter, it will sit below the 8 bumps surrounding the filter. **(Fig. 1)**
3. Using the provided K&N® sealing grease, apply a generous amount of grease in the groove around the perimeter of the K&N® air filter. **(Fig. 2)**
4. Install the K&N® air filter into the air box, ensuring the clips on the plastic frame completely snap into the air box feature. **(Fig. 3)**

**THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.**



Fig.1



Fig.2



Fig.3



Fig.4

### CLEANING:

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.