



INSTALLATION INSTRUCTIONS

PART NUMBER: HA-2596

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

* **FREE K&N® decal** To register your warranty, please see us online at knfilters.com/register. **FREE K&N® decal ***

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N Filtercharger® seals properly.

INSTALLATION:

The HA-2596 does not come pre-oiled. BEFORE installation into bike, you must oil the filter:
Oiling Instructions:

1. Cut the tip off the provided oil pillow pack.
2. Run the tip of the oil pillow pack along the edge of each pleat.
Note: Use $\frac{3}{4}$ of the oil pillow pack.
3. The K&N® Air Filter is now ready to be installed.

Once the filter is oiled, you will need to install the air filter. Refer to the following steps to assist with installation:

1. Remove OE filter from air box. With the filter removed, clean all debris from sealing surfaces:
2. With the supplied grommet, insert into the top of the K&N® air filter. Note: The fit will be tight, and it may require the use of a small standard (flathead) screw driver to form grommet into hole in air filter. Use caution with screw driver not to damage grommet. See Fig. 1.
3. With the grommet installed, insert the 90 deg. Vent into the hole in the grommet. Slowly work the vent into place by turning back and forth until it is seated completely into the grommet. See Fig. 2.
4. Install K&N® air filter into the air box. Be sure that the flange of the filter seats into the opening into the air box. Once installed correctly the flange of the filter will sit flush. See Fig. 3.
5. Install the OE filter retention clip onto the back side of the filter.
6. With the filter installed, attached breather hose onto 90 deg. Vent tube. See Fig 4.
7. Re-install air box lid and fasten screws.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

Fig. 1



Fig. 2



Fig. 3



Fig. 4

