



# INSTALLATION INSTRUCTIONS

## Part Number 33-2044

This filter fits:      See current K&N catalog for complete listing

\*FREE K&N DECAL To register your warranty, please see us online at [knfilters.com/register](http://knfilters.com/register). FREE K&N DECAL\*

**Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modifications will be required. However the following procedure MUST be followed to ensure a proper fit and seal of the K&N Air Filter.**


### INSTALLATION

- 1) Loosen the hose clamps on the main intake hose that connects the airbox to the engine.
- 2) Remove the bolts in the airbox lid.
- 3) Loosen the hose clamps on the hose that hooks the airbox to the reserve chamber above the radiator.

**NOTE: Some models may not use a reserve chamber**

- 4) Lift the airbox lid up and remove the stock filter.
- 5) Install the K&N Air Filter into the lid of the airbox. Be certain it is properly seated .
- 6) Re-install the airbox cover and the reserve hose.
- 7) Tighten the bolts in the airbox lid.
- 8) Tighten the hose clamps on the reserve hose.
- 9) Tighten the hose clamps on the main intake hose.

**THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT**

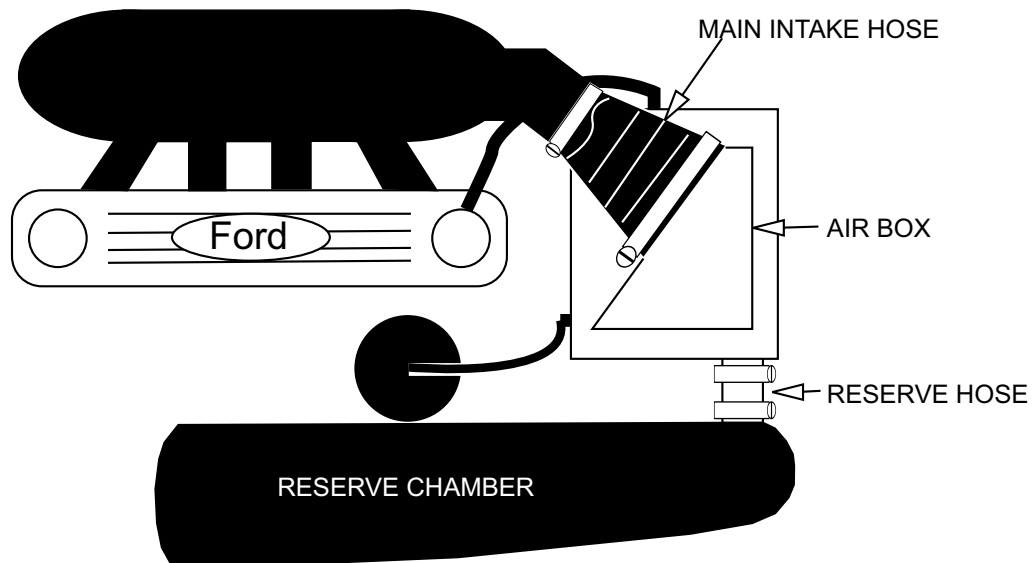

FORD TEMPO shown