
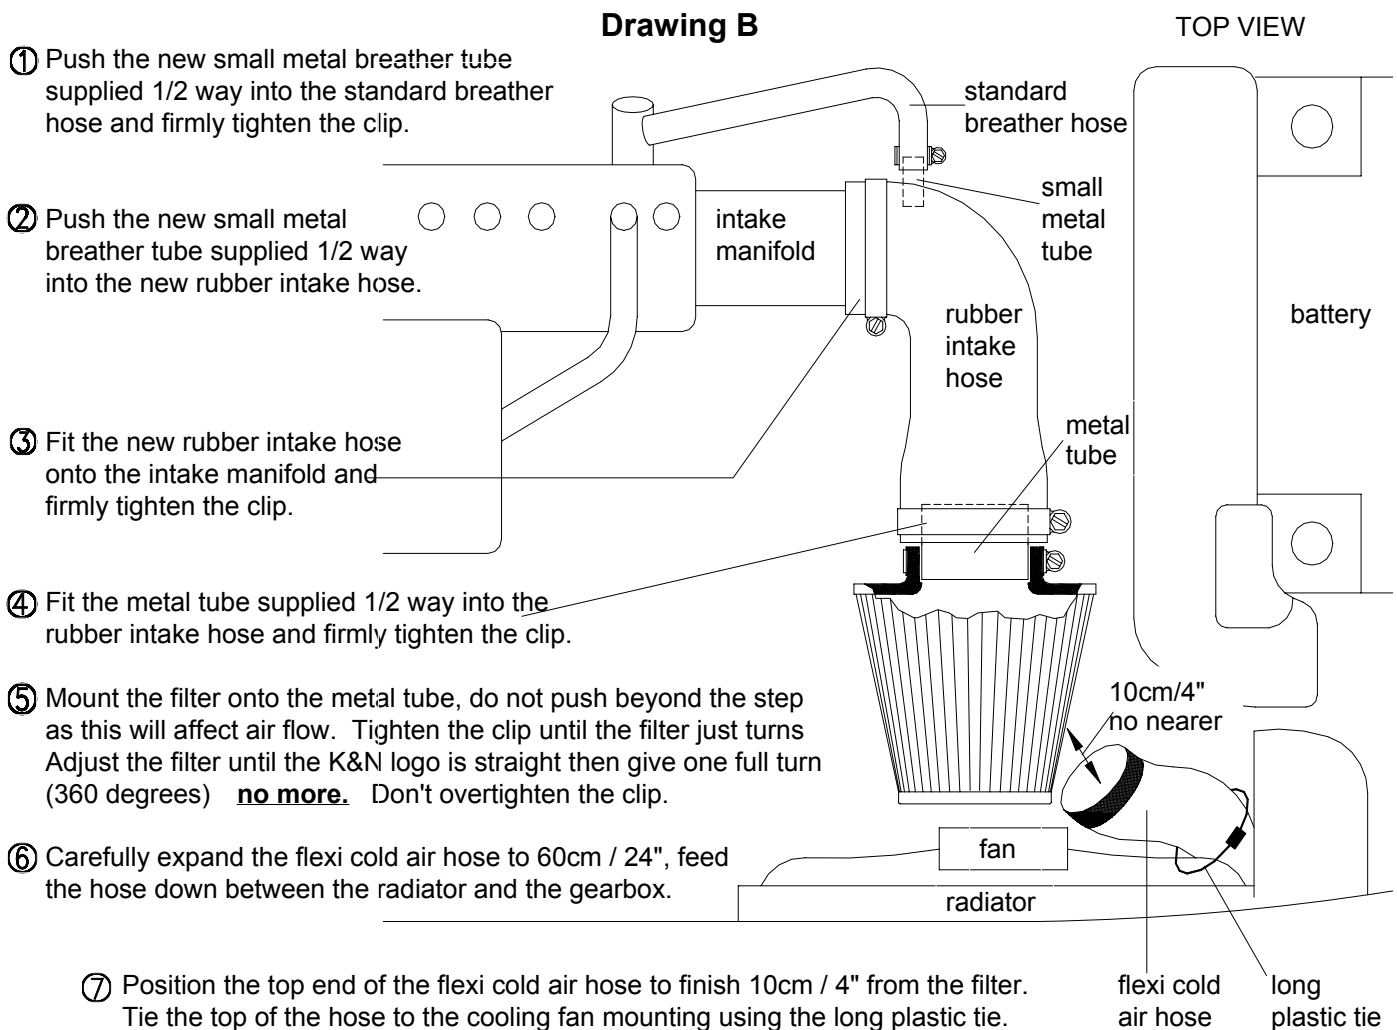



PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE FITTING THIS KIT

If you have a problem, however small, call our Technical Department

Tel:- 01925 636950. Fax:- 01925 243111 Mon - Thurs 8.30 - 5pm.

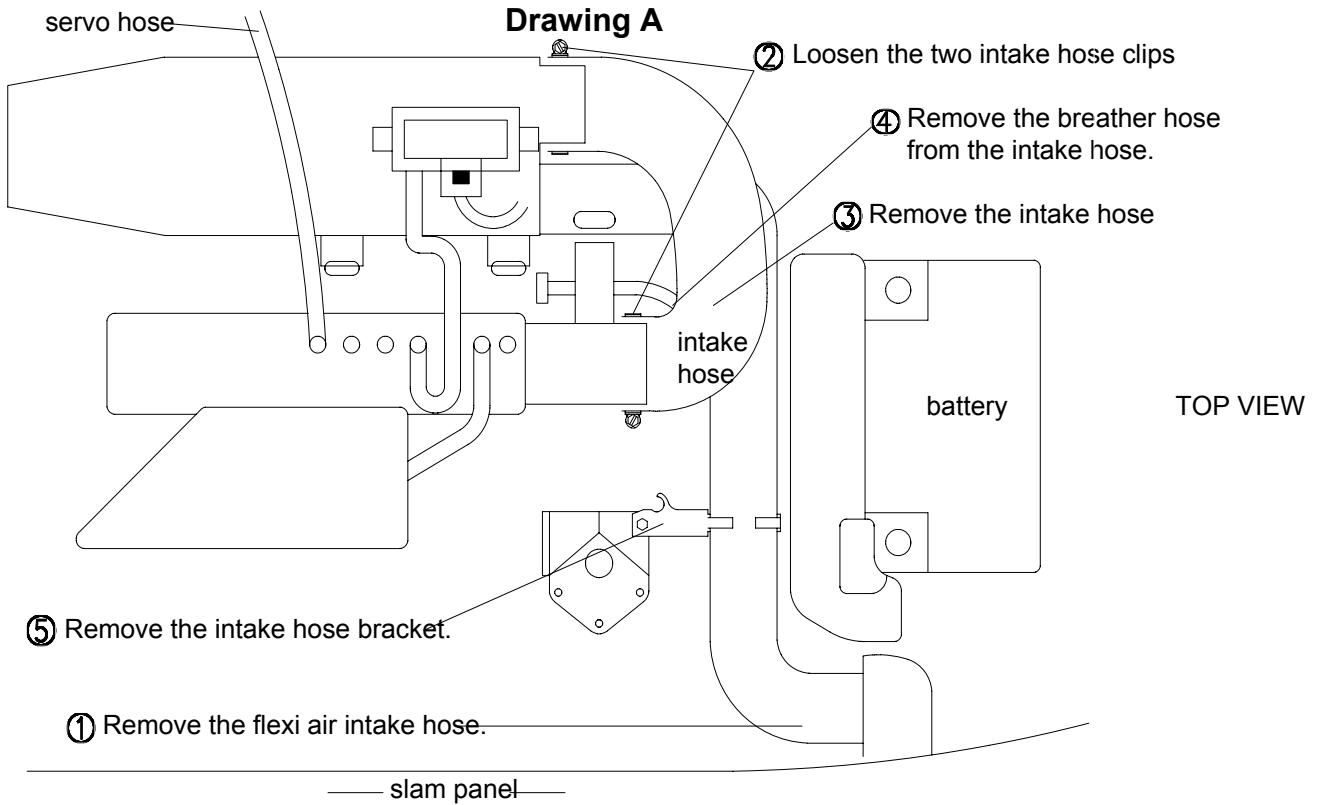

FRONT VIEW

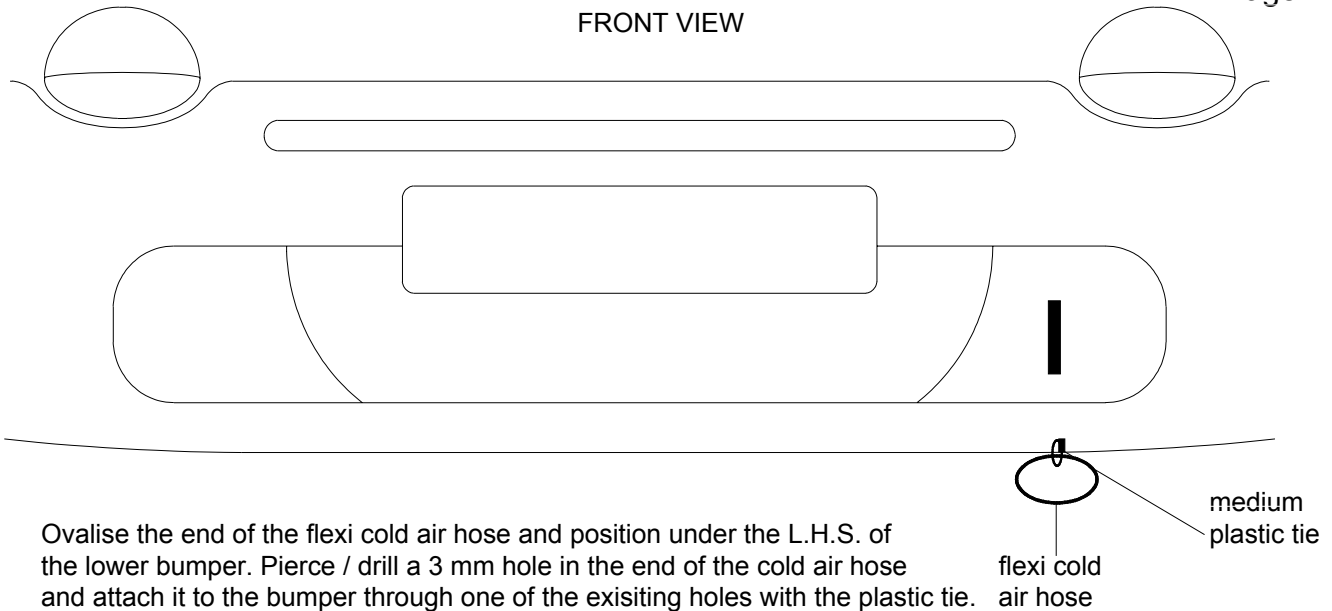

Ovalise the end of the flexi cold air hose and position under the L.H.S. of the lower bumper. Pierce / drill a 3 mm hole in the end of the cold air hose and attach it to the bumper through one of the existing holes with the plastic tie.

flexi cold
air hose

medium
plastic tie

Tuning.

CAT. Cars No adjustments required

An increase in fuel mixture may be required if further modifications are carried out.

Filter Maintenance.

Under normal conditions clean and reoil the filter at approx. 40,000 miles / 65,000km.

Use only K&N cleaner and oil and follow the instructions carefully.

K&N filters are pre-oiled ready to fit**The advantage of K&N's cold air intake system.**

Cooler air being denser, will show positive improvements in power over filter systems that draw hot air from the engine bay.

This Kit Should Contain:

- 1 x Air Filter
- 1 x Intake Hose
- 1 x Cold Air Hose Assembly
- 1 x Instruction Sheet
- 1 x Instruction Pack :-
 - 1 x Filter Maintenance Sheet
 - 1 x K&N window sticker
 - 1 x Million Mile Warranty
 - 1 x Leaflet
- 1 x Fixing Kit:-
 - 1 x Hose Clip #48
 - 1 x Metal Tube
 - 1 x Small Breather Tube
 - 1 x #10 Hose clip
 - 1 x #32 Hose clip
 - 1 x #40 Hose clip
 - 1 x Long Cable Tie
 - 1 x Medium Cable Tie

FITTING YOUR OWN 57i KIT

If not it is **essential** that the person fitting the kit (e.g. mechanic) **carefully follows these particular instructions** even if he has fitted K&N kits before. This will save you both time and money. kits incorrectly fitted may show a loss in performance e.g. the positioning of the essential cold air hose, (flexi expandable and rubber hoses are used).

A final check under the bonnet, by yourself with the instructions, would seem sensible