



Part Number 57-0373

INSTALLATION INSTRUCTIONS

Seat Cordoba 1.6L 8v Spi 1994–2000

1. Remove the air box lid securing nut, unclip & remove the lid / filter from the vehicle. (Fig. 1)
2. Remove the hot air hose from the air box base. (Fig. 2)
3. Undo the 3 bolts on the air box base-securing flange. (Fig. 3)
4. Lift the air box base, then carefully remove the vacuum and breather pipes from the base of the air box. Now remove the air box base from the vehicle.
5. Remove the thin plastic vacuum pipe from the back of the throttle housing. Blank off the metal vacuum pipe using the small rubber plug supplied. (Fig. 4)
6. Fit the large end of the stepped adaptor supplied into the original breather hose. (Fig. 5)
7. Fit the new breather hose onto the small end of the stepped adaptor. (Fig. 6)
8. Fit the small bore adaptor into the end of the new breather hose. (Fig. 7)
9. Fit the breather adaptor into the base of the Air filter and fit the Air filter on to the throttle-housing flange. (Fig. 8)
10. Firmly tighten the hose clip on the Air filter. (Fig. 9)
11. Carefully expand the cold air hose and pierce / drill 2 holes in the end, Feed the cold air hose down past the side of the radiator to the front lower grill and secure with the plastic ties supplied. (Fig. 10)
12. Using the plastic ties supplied secure the cold air hose to the slam panel and the L/H side engine mounting, position the end of the cold air hose 4" / 10cm away from the Air filter. (Fig. 11)
13. Installation is now complete.

Parts list:

- 1 x Air filter.
- 1 x #60 Hose Clip.
- 1 x Cold Air Hose Assembly.
- 1 x Literature Pack.
- 1 x Fixing Kit :-
 - 1x Breather Hose.
 - 1 x 19–12.5mm Stepped Adaptor.
 - 1 x 12.5mm Straight Adaptor.
 - 1 x #72 Hose Clip
 - 4 x Long Plastic Ties.
 - 1 x Rubber Breather Plug.

WARNING: Before starting the engine carry out a final fitment check of the K&N performance kit. It will be necessary for all intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void the warranty.

FILTER MAINTENANCE: K&N suggests checking the filter periodically for excessive dirt build-up. When the element becomes covered in dirt (or once a year), service it according to the instructions on the Recharger service kit available from your K&N dealer, part number 99- 5003EU.

For cleaning instructions please visit our website: www.knfilters.com/cleaning



Fig. # 1



Fig. # 2



Fig. # 3



Fig. # 4



Fig. # 5

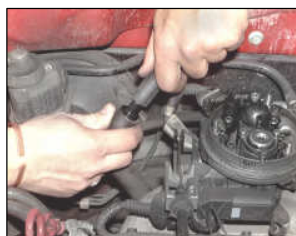


Fig. # 6

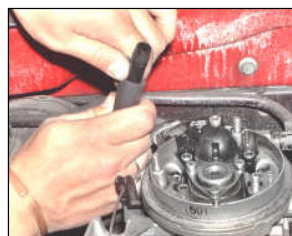


Fig. # 7



Fig. # 8



Fig. # 9



Fig. # 10



Fig. # 11