

Part Number 57-0376

INSTALLATION INSTRUCTIONS

Vauxhall Frontera / Opel Frontera A 2.0L 8v 4Cyl. 1991-8/1995

1. Unclip & remove the electrical harness plug from the AFM (Air Flow Meter).(Fig. 1)
2. Unclip & remove the intake hose from the AFM. (Fig. 2)
3. Unclip & remove the air box lid / AFM assembly from the air box base & carefully remove from the vehicle. (Fig. 3&4)
4. Remove the 2 clips securing the front of the air box base, slide the base out of its rear mounting & carefully remove the base from the vehicle. (Fig. 5)
5. Remove the 4 bolts from inside the air box lid & the single bolt from the outside, carefully separate the AFM from the lid. (Fig. 6&7)
6. Fit the aluminum filter adapter to the AFM using the original gasket & allen head bolts supplied. (Fig. 8)
7. Fit the new Air filter onto the aluminum filter adapter & fully tighten the hose clip supplied. (Fig. 9)
8. Drill a 8.5mm hole in the inner wing as shown, ensure anti-corrosion treatment is carried out on the hole. (Fig.10)
9. Secure the mounting bracket to the hole using the studded rubber mounting, spring washers, flat washers & nuts supplied. (Fig.11)
10. Refit the AFM / Air filter assembly to the intake hose, secure the AFM to the bracket using the M8 bolts, spring washers & flat washers supplied. (Fig.12)
11. Retighten the hose clip securing the AFM to the intake hose. (Fig.13)
12. Carefully lengthen the flexi cold air hose, Secure the top of the hose to finish approx. 4" / 10cm from the filter charger using a plastic tie supplied. (Fig.14)
13. Pierce / drill two 5mm holes in the end of the flexi hose, feed the flexi hose through to the front grille. (Fig.15)
14. Carry out a final check of the height/alignment of the K&N induction system before starting the engine. Installation is now complete.

Parts list:

- 1 x Air filter Element.
- 1 x 104 Hose Clip (Filter).
- 1 x Aluminum Filter Adapter.
- 1 x Mounting Bracket.
- 1 x Flexi Cold Air Hose.
- 1 x Literature Pack.

1 x Fixing Kit :-

- 4 x Allen Head Bolt.
- 4 x 5/16" Spring washer.
- 3 x Long Plastic Ties.
- 1 x Studded Mounting.
- 2 x 5/16" Hex Nut.
- 2 x M8 Hex Head Bolt.
- 1 x Large Flat Washer.
- 3 x Small Flat Washer.

WARNING: Before starting the engine carry out a final fitment check of the K&N performance kit. It will be necessary for all intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void the warranty.

FILTER MAINTENANCE: K&N suggests checking the filter periodically for excessive dirt build-up. When the element becomes covered in dirt (or once a year), service it according to the instructions on the Recharger service kit available from your K&N dealer, part number 99- 5003EU.

For cleaning instructions please visit our website: www.knfilters.com/cleaning



Fig. # 1



Fig. # 2



Fig. # 3



Fig. # 4



Fig. # 5



Fig. # 6



Fig. # 7



Fig. # 8



Fig. # 9

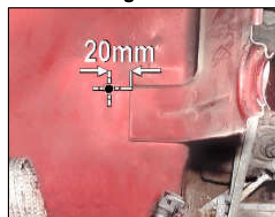


Fig. # 10

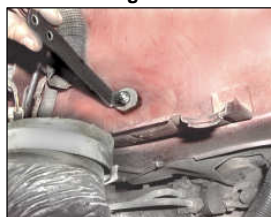


Fig. # 11



Fig. # 12



Fig. # 13



Fig. # 14



Fig. # 15